

OPERATION INSTRUCTIONS Rock 300 MMXX


This console is equipped with a PC computer, A DVD/VHS Player and a Doc Cam connected to a digital video projector. HDMI and VGA laptop connections are available.

The Extron **Touch Panel** is utilized for control.
If the panel has gone to sleep, touch it to resume.
Press **Power On Room** to get started.



Once the projector has warmed up the **PC** computer will be selected.
Other devices may be selected in the top row.

Laptop display cables are available in the cubby beside the touch panel.

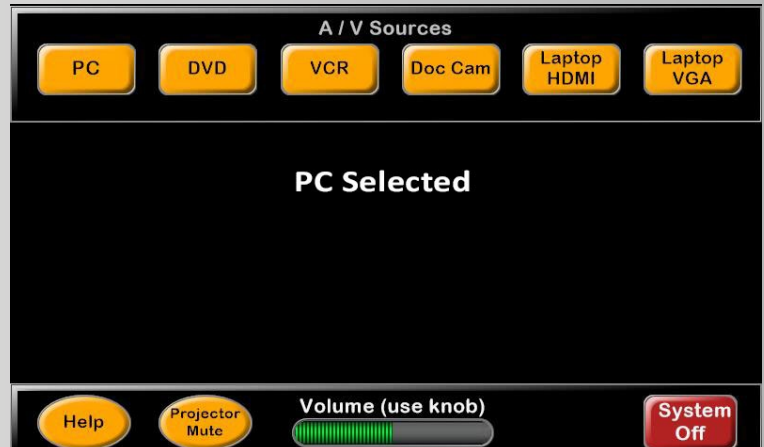

When selected, controls for **DVD or VCR** will appear on the touch screen.

Audio Volume can be adjusted with the knob at the bottom of the touch panel.

Projector Mute can be used to temporarily hide your presentation.



When finished with your presentation
Please Press System Off to Power Off System

Need help? Call Classroom Support at 878-6670