

OPERATION INSTRUCTIONS

 
SAMC 151 MMXX

This console is equipped with 2 digital video projectors connected with a PC computer, Document Camera and a Digital Signage Player. Microphones, and HDMI/VGA laptop connections are available. The wall mounted TV can display the Signage Player

The Crestron **Touch Panel** is utilized for control.

If the panel has gone to sleep, touch it to resume.


Press **Power On System** to get started.

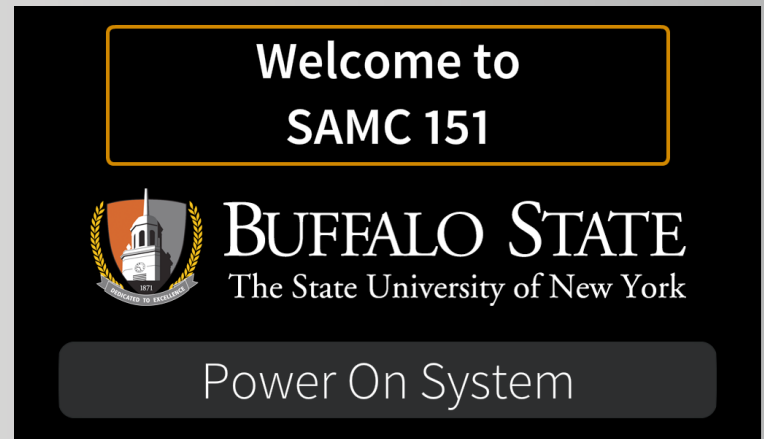

Once the projectors have warmed up the **PC Computer** will be automatically selected.

Other inputs may be selected for each projector in the left columns.

 
Laptop display cables are available in the cubby on the console top.

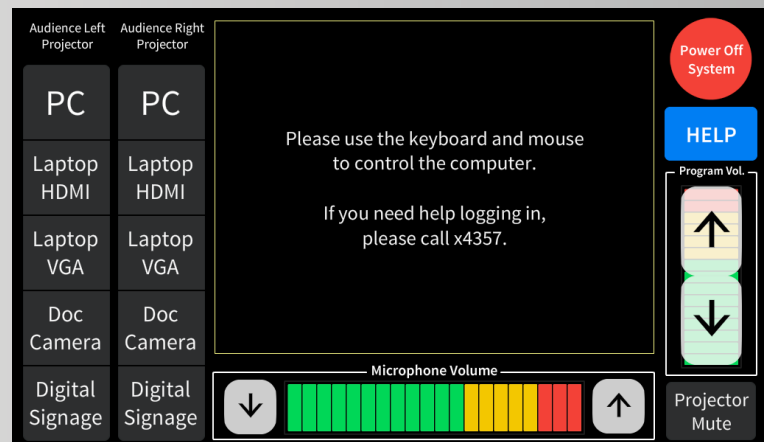

The Doc Camera is located in the drawer on the right side of the console.

Program Volume can be adjusted with the control buttons on the right, **Microphone volume** at the bottom.

 When **Digital Signage** is selected, controls for the TV will appear.

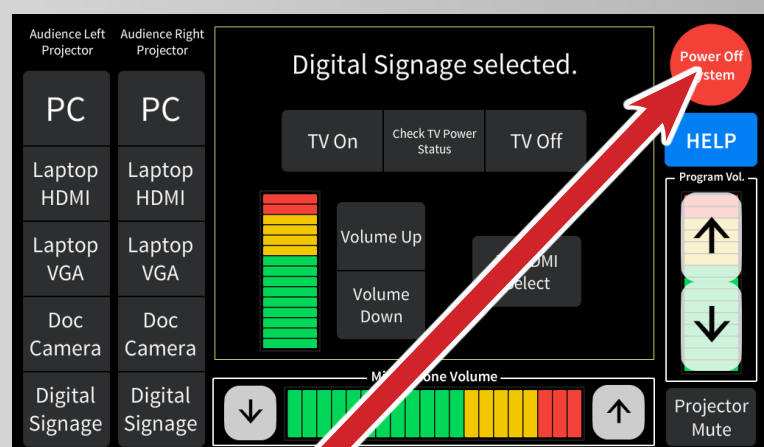

**When finished with your presentation
Please Press Power Off System.**

Need help? Call Classroom Support at 878-6670